


# INSTALLATION INSTRUCTIONS

## 3 PIECE KNOCK DOWN CK FRAMES

### **\*\*IMPORTANT\*\***

MAKE SURE ON SINGLE DOOR OPENINGS THAT THE PRE-DRILLED HOLES FOR THE HARDWARE (HEADER AND HINGE SIDE) ARE LOCATED ON THE SAME SIDE OF THE JAMB.

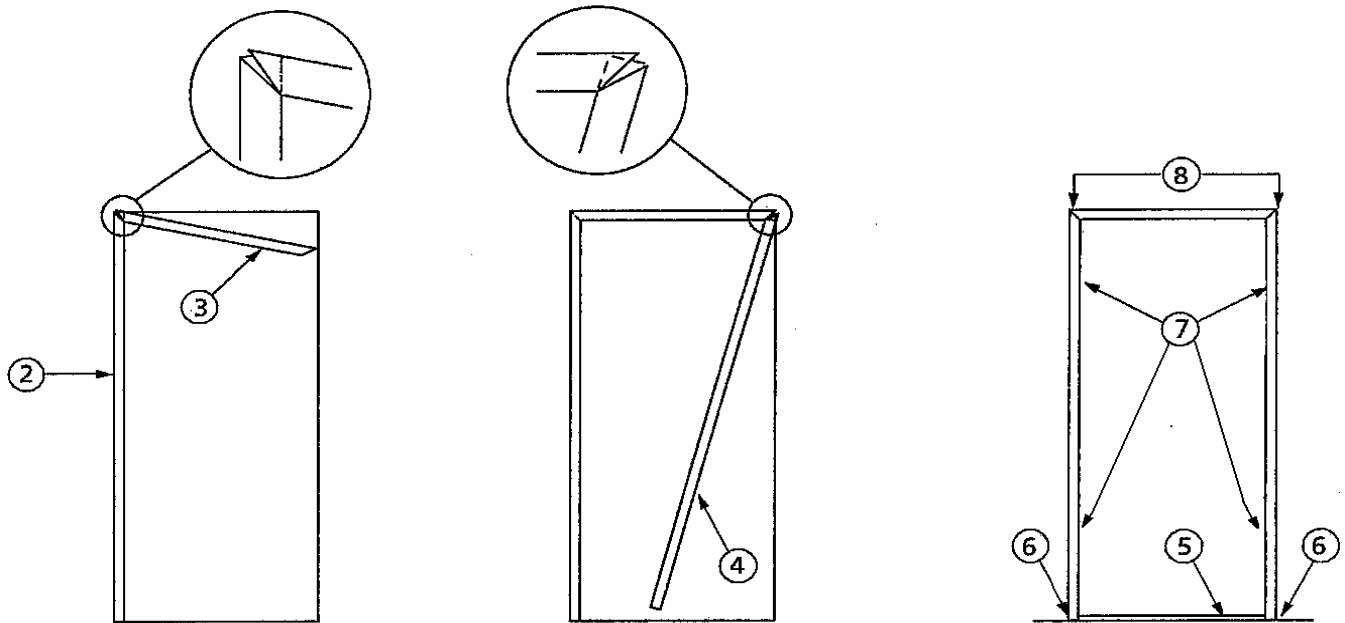

### **INSTRUCTIONS:**

1. Construct wall with rough opening size as follows:
  - rough opening height = finished opening height plus 3/4" to 1"
  - rough opening width = finished opening width plus 2-1/8" to 2-3/8"
2. Retract compression anchors (2 per jamb / 4 total per assembly) in the jambs and install one jamb in position on wall.
3. Insert frame head under the corner clips of the jamb and raise into position.
4. Insert the corner clip of the remaining jamb into the opposite end of the head and position jamb.
5. Locate a removable frame spacer bar (not supplied) at base of centered frame to maintain proper opening width.
6. Square and plumb frame and install base anchor screws through countersunk holes in frame face and into wall.
7. Square top of frame and tighten compression anchors by turning screws counter clockwise (do no over tighen).
8. Install (4) #8 x 1/2" sheet metal screws at the corners of the head to attach head to iambs.

**\*NOTE:** Frames must be painted to prevent rusting.

Eliason Corporation **Easy Swing**® Impact Doors

website: [www.eliasoncorp.com](http://www.eliasoncorp.com)

P.O. Box 2128, Kalamazoo, MI 49003  
Phone: 800-828-3655 / 269-327-7003  
Fax: 800-828-3577 / 269-327-7006  
email: [doors@eliasoncorp.com](mailto:doors@eliasoncorp.com)

P.O. Box 1026, Woodland, CA 95776  
Phone: 800-828-2655 / 530-662-5494  
Fax: 800-662-5192 / 530-662-5192  
email: [doors@eliasonwest.com](mailto:doors@eliasonwest.com)